

ENCRIPCIÓN

Ingresar a la página del LINKSYS (Depende del modelo).

CAMBIAR CANAL

- Seleccionar del menú superior la opción de WIRELESS.
- Se debe seleccionar el submenú de BASIC WIRELESS SETTINGS.
- En la indicación de WIRELESS NETWORK NAME (SSID) debe estar seleccionada la opción de LINKSYS.
- En la opción de WIRELESS CHANNEL es donde se debe de cambiar el canal.
- Para que los cambios se guarden se debe presionar el botón de SAVE SETTINGS.



The screenshot shows the Linksys web interface for a Compact Wireless-G Broadband Router (WRT54GC). The page is titled "Wireless" and includes a navigation menu with options like Setup, Wireless, Security, Access Restrictions, Applications & Gaming, Administration, and Status. Under the "Wireless" menu, there are sub-options: Basic Wireless Settings, Wireless security, Wireless MAC Filter, and Advanced Wireless Settings. The "Basic Wireless Settings" page is active, showing the following configuration:

Mode:	Mixed
Wireless Network Name(SSID):	linksys
Wireless Channel:	06
Wireless SSID Broadcast:	Enable

At the bottom of the page, there are two buttons: "Save Settings" and "Cancel Changes". The Cisco Systems logo is visible in the bottom right corner.

GENERAR PASSWORD DE SEGURIDAD

- Seleccionar del menú superior la opción de WIRELESS.
- Se debe seleccionar el submenú de WIRELESS SECURITY.
- En la indicación de SECURITY MODE se debe seleccionar la opción de WEP.
- En donde se indica ENCRYPTION se debe seleccionar la opción de (128 bits).
- Presionar el botón de GENERATE.
- En la indicación de WEP Key1: ingresar la contraseña deseada la cual debe ser de 10 dígitos alfanuméricos.
- Para que los cambios se guarden se debe presionar el botón de SAVE SETTINGS.



LINKSYS
A Division of Cisco Systems, Inc. Firmware Version: v1.01.5

Compact Wireless-G Broadband Router WRT54GC

Wireless

Setup | **Wireless** | Security | Access Restrictions | Applications & Gaming | Administration | Status

Basic Wireless Settings | **Wireless security** | Wireless MAC Filter | Advanced Wireless Settings

Wireless Security

WEP

Security Mode:

Encryption:

Passphrase:

WEP Key 1:

WEP Key 2:

WEP Key 3:


WEP Key 4:

TX Key:

CISCO SYSTEMS

FILTRADO POR MAC

- Seleccionar del menú superior la opción de WIRELESS.
- Se debe seleccionar el submenú de WIRELESS MAC FILTER.
- Seleccionar la opción de ENABLE.
- De las opciones siguientes seleccionar la opción de PERMIT PCS LISTED BELOW TO ACCESS THE WIRELESS NETWORK
- Posteriormente se deben ingresar las MAC'S de los equipos deseados.
- Para que los cambios se guarden se debe presionar el botón de SAVE SETTINGS.

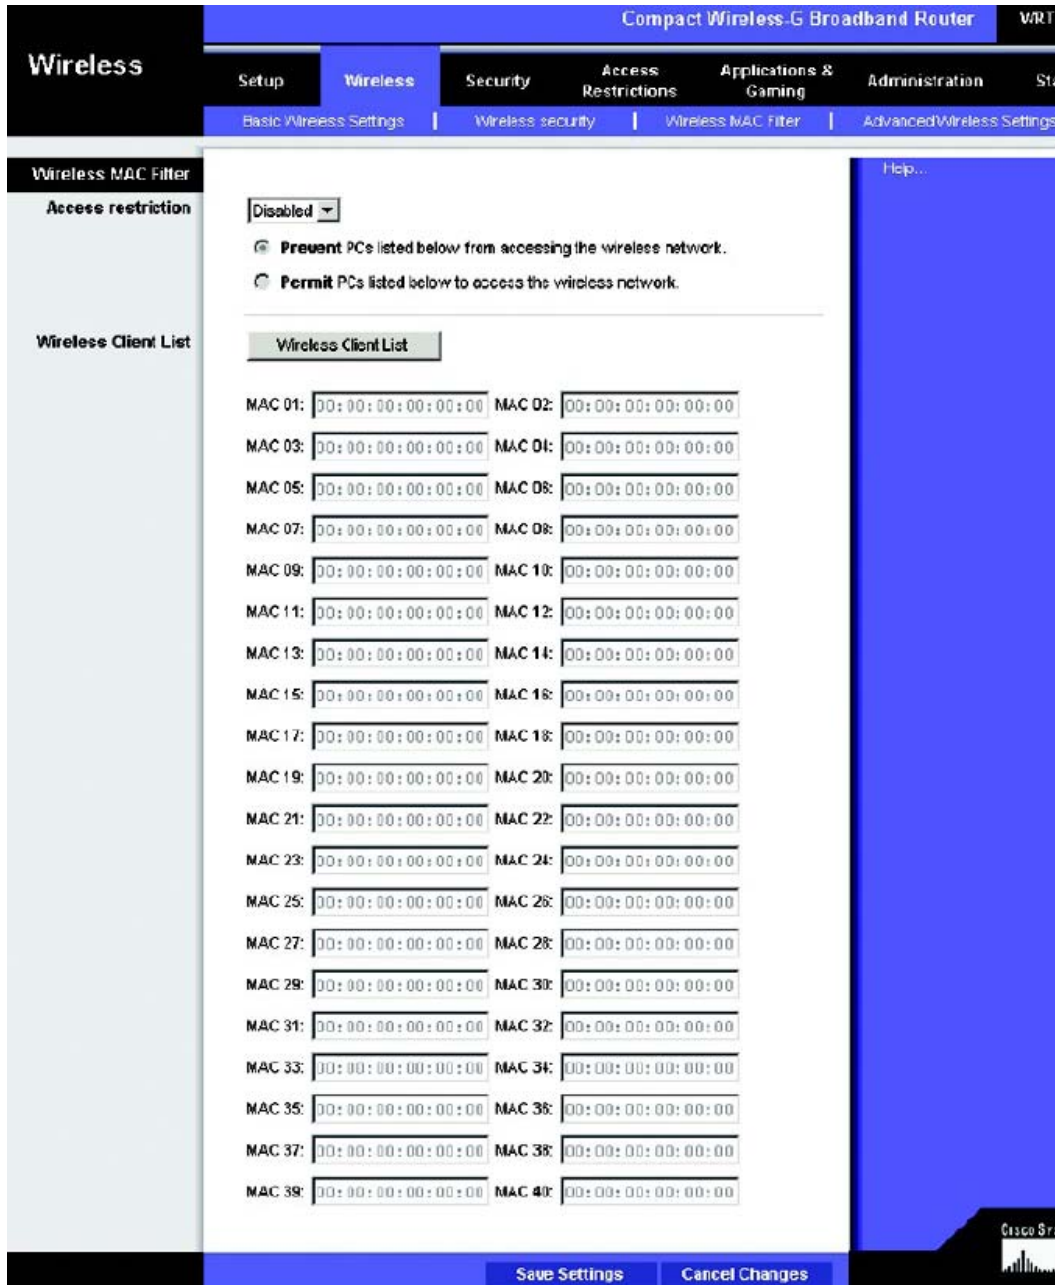

The screenshot shows the configuration interface for a Linksys Compact Wireless-G Broadband Router. The page is titled "Wireless" and has several tabs: Setup, Wireless, Security, Access Restrictions, Applications & Gaming, Administration, and Status. Under the "Wireless" tab, there are sub-tabs: Basic Wireless Settings, Wireless security, Wireless MAC Filter, and Advanced Wireless Settings. The "Wireless MAC Filter" sub-tab is active.

On the left side, there are two sections: "Wireless MAC Filter" and "Wireless Client List".

In the "Wireless MAC Filter" section, the "Access restriction" dropdown is set to "Disabled". There are two radio button options:

- Prevent PCs listed below from accessing the wireless network.
- Permit PCs listed below to access the wireless network.

The "Wireless Client List" section contains a table of MAC addresses, each with a corresponding input field for the MAC address. The table is as follows:

Wireless Client List	
MAC 01:	00:00:00:00:00:00
MAC 02:	00:00:00:00:00:00
MAC 03:	00:00:00:00:00:00
MAC 04:	00:00:00:00:00:00
MAC 05:	00:00:00:00:00:00
MAC 06:	00:00:00:00:00:00
MAC 07:	00:00:00:00:00:00
MAC 08:	00:00:00:00:00:00
MAC 09:	00:00:00:00:00:00
MAC 10:	00:00:00:00:00:00
MAC 11:	00:00:00:00:00:00
MAC 12:	00:00:00:00:00:00
MAC 13:	00:00:00:00:00:00
MAC 14:	00:00:00:00:00:00
MAC 15:	00:00:00:00:00:00
MAC 16:	00:00:00:00:00:00
MAC 17:	00:00:00:00:00:00
MAC 18:	00:00:00:00:00:00
MAC 19:	00:00:00:00:00:00
MAC 20:	00:00:00:00:00:00
MAC 21:	00:00:00:00:00:00
MAC 22:	00:00:00:00:00:00
MAC 23:	00:00:00:00:00:00
MAC 24:	00:00:00:00:00:00
MAC 25:	00:00:00:00:00:00
MAC 26:	00:00:00:00:00:00
MAC 27:	00:00:00:00:00:00
MAC 28:	00:00:00:00:00:00
MAC 29:	00:00:00:00:00:00
MAC 30:	00:00:00:00:00:00
MAC 31:	00:00:00:00:00:00
MAC 32:	00:00:00:00:00:00
MAC 33:	00:00:00:00:00:00
MAC 34:	00:00:00:00:00:00
MAC 35:	00:00:00:00:00:00
MAC 36:	00:00:00:00:00:00
MAC 37:	00:00:00:00:00:00
MAC 38:	00:00:00:00:00:00
MAC 39:	00:00:00:00:00:00
MAC 40:	00:00:00:00:00:00

At the bottom of the page, there are two buttons: "Save Settings" and "Cancel Changes".